













LED status indicators /LED




/LED

/LED





Robotic lawn mower

 Green constant light In operation			
 Green flashing light Paused			
 Green pulsating light Charging			
 Red constant light Error			
 Orange constant light Stopped			
 Orange flashing light Waiting for PIN code	PIN	PIN	PIN
 Blue constant light Parking/Connected with Bluetooth®	/ Bluetooth®	/Bluetooth®	Bluetooth®
 Blue pulsating light Parked and charging			
 Blue flashing light Parked/Bluetooth® pairing active	/Bluetooth®	/Bluetooth®	Bluetooth®
 White constant light Switching off/Firmware download finished	/	/	
 White pulsating Firmware installation ongoing			
 White flashing light Firmware update required			

Reference station

 Green constant light In operation			
 Green pulsating light Startup			
 Red flashing light Error			

Charging station

 Green constant light Good charging station signal			
 Green flashing light ECO mode	ECO		ECO
 Red flashing light Error in the charging station's antenna			
 Red constant light Error			

AUTOMOWER® IS A TRADEMARK OWNED BY HUSQVARNA AB. COPYRIGHT © 2025 HUSQVARNA. ALL RIGHTS RESERVED.
 AUTOMOWER® HUSQVARNA AB © 2025 HUSQVARNA
 AUTOMOWER® HUSQVARNA AB . COPYRIGHT © 2025 HUSQVARNA. ALL RIGHTS RESERVED.
 AUTOMOWER™ HUSQVARNA AB COPYRIGHT © 2025 HUSQVARNA. ALL RIGHTS RESERVED.

App Store and Apple logo are trademarks of Apple Inc.

Google Play and the Google Play logo are trademarks of Google LLC.

Bluetooth® is a registered trademark owned by Bluetooth SIG, Inc. and any use of such mark by Husqvarna is under license.

1144756-94



2025-09-19



Husqvarna
www.husqvarna.com