



Quick-start guide

1 See Operator's manual for detailed starting instructions.

2 Put the loop handle between the arrows on the shaft. Move the spacer (A) into the slot in the loop handle. Install the nut (B), knob (D), and screw (C). Do not tighten them fully. Adjust the product to an applicable position. Tighten the bolt.

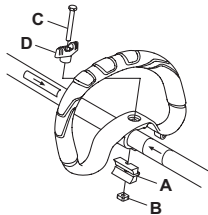


Attach guide to bracket by inserting TAB (A) on shaft bracket into SLOT(B) in guide. Rotate guide until guide is flush with bracket. Insert BOLT (C) through bracket.

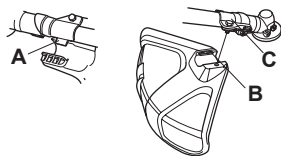


3 Set unit on a flat surface. Mix gasoline and 2-cycle oil at 50:1 ratio. Shake well. Pour into fuel tank.




4 Press primer bulb 10 times.

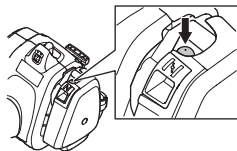


5 Set choke lever to FULL position.

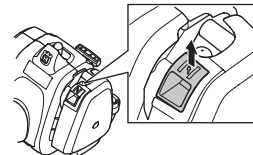

6 Hold the body of the product on the ground with your left hand. Pull the starter rope handle slowly with your right hand until you feel resistance. Then pull the starter rope handle quickly and with force until engine starts or tries to start.

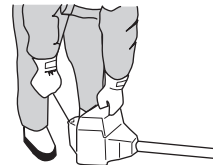

7 Move choke lever DOWN to RUN position.

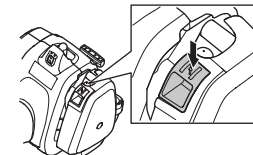

8 If the engine starts, push the throttle trigger lightly and warm-up 60 seconds. If the engine does not start, pull the starter rope handle until engine starts, push the throttle trigger lightly and warm-up 60 seconds.



9 Squeeze throttle trigger to operate.

